


Maxi LNX Remote Control

2.0 Maxi LNX remote control layout

1	TV input source select
2	TV/AUX power/standby
3	Colour navigation
4	Replay VOD or recorded video
5	STB PVR transport keys
6	Electronic Program Guide
7	Navigation and OK
8	Back
9	Volume up and down
10	Channel select and text entry
11	Go to Live TV
12	Option (function mapped by the service provider)
13	Infra-red (IR) window
14	STB power/standby
15	VOD menu
16	Forward VOD or recorded video
17	Information
18	Exit
19	STB menu
20	Channel/Page up and down
21	Mute
22	Subtitles/closed captions
23	DVR /recordings menu
24	Battery low warning LED

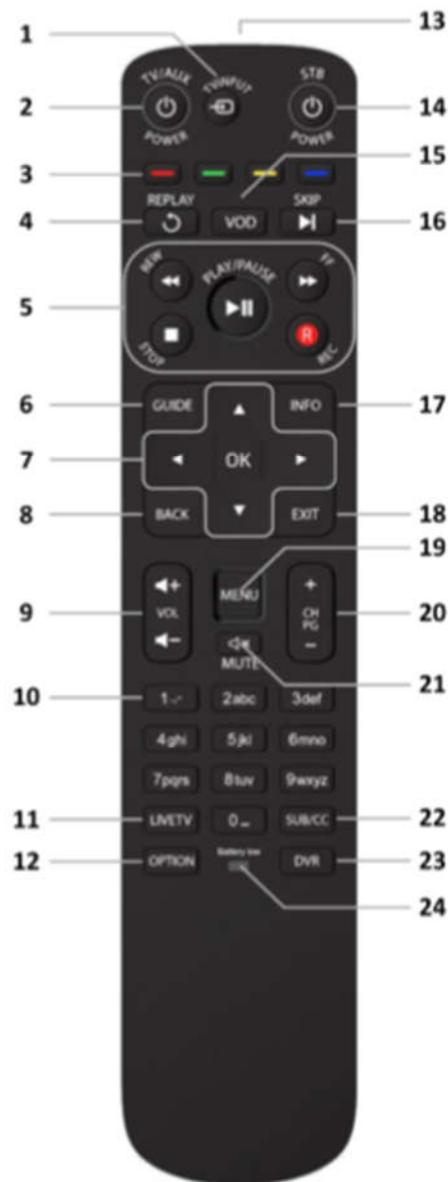

Programming to control **volume and power** functions

Step 1: Brand Search/Auto Search

- <https://www.aminocom.com/content/8-legal/3-docs/tv-brand-code-sets-for-willow-oak-birch-mini-maxi-remote.pdf>
- Press 1 and 3 simultaneously until TV-LED flashes twice and remains on.
- Release keys then enter the 4-digit TV brand code.
 - You can enter 9999 or no digits for auto search. (**Auto-search is recommended**)
 - If valid the TV-LED gives a confirmation flash (two flashes) and remains on.
 - If invalid, the TV-LED gives error flash (rapid flashing/flickering) and returns to user mode.
- Hold Mute key - if TV doesn't mute continue to hold button.
- Release Mute key when TV mutes.
- Check to confirm remote is working- press keys **TV/AUX-POWER, TV-INPUT, VOL+, VOL-, MUTE**

Step 2: Volume keys mode

- To set volume keys as TV keys
 - Press keys **MENU** and **3** simultaneously- TV-LED gives a confirmation flash.
- To set volume keys as STB keys
 - Press keys **MENU** and **4** simultaneously- TV-LED gives a confirmation flash. **IR or RF mode.**

Programming to control **channel** functions

- **IR mode:** Press **MENU** and **1** simultaneously- STB-POWER-LED flashes twice to confirm.
- **RF mode:** Press keys **MENU** and **2** simultaneously- STB-POWER-LED flashed twice to confirm. The remote is now in BLE mode.

Unpairing

- If the remote is unpaired, it will disconnect from the STB immediately but will stay in IR mode.

To unpair the remote from the STB:

- Press keys **1** and **6** simultaneously until TV-LED flashes twice.
- Enter the key sequence **9 8 2**. TV-LED turns off and the STB-POWER-LED flashes twice to confirm.

Factory Reset

- After a Factory Reset (FR), the remote is not paired and is in BLE mode. All data stored in the remote is removed.

To do a factory reset:

- Press keys **1** and **6** simultaneously- the TV-LED will flash twice and remain on.
- Enter the key sequence **9 8 1**.
 - The remote deletes all settings and returns to factory default mode. The STB-LED gives a confirmation flash and the remote control returns to user mode.
 - If the key sequence is invalid, or not received within 30 seconds, the process times out, and the TV-LED gives an error flash and the remote returns to user mode.